


BUSINESS ADDRESS:
207 N. Saginaw St.
Byron, MI 8418
(810) 266-6526
barnwood@timelesslumber.com



WAREHOUSE ADDRESS:
8440 Bennett Lake Rd.
Fenton, MI 48430
DATE: 10/14/2022
www.timelesslumber.com

Cultured Stone mantel mount 2

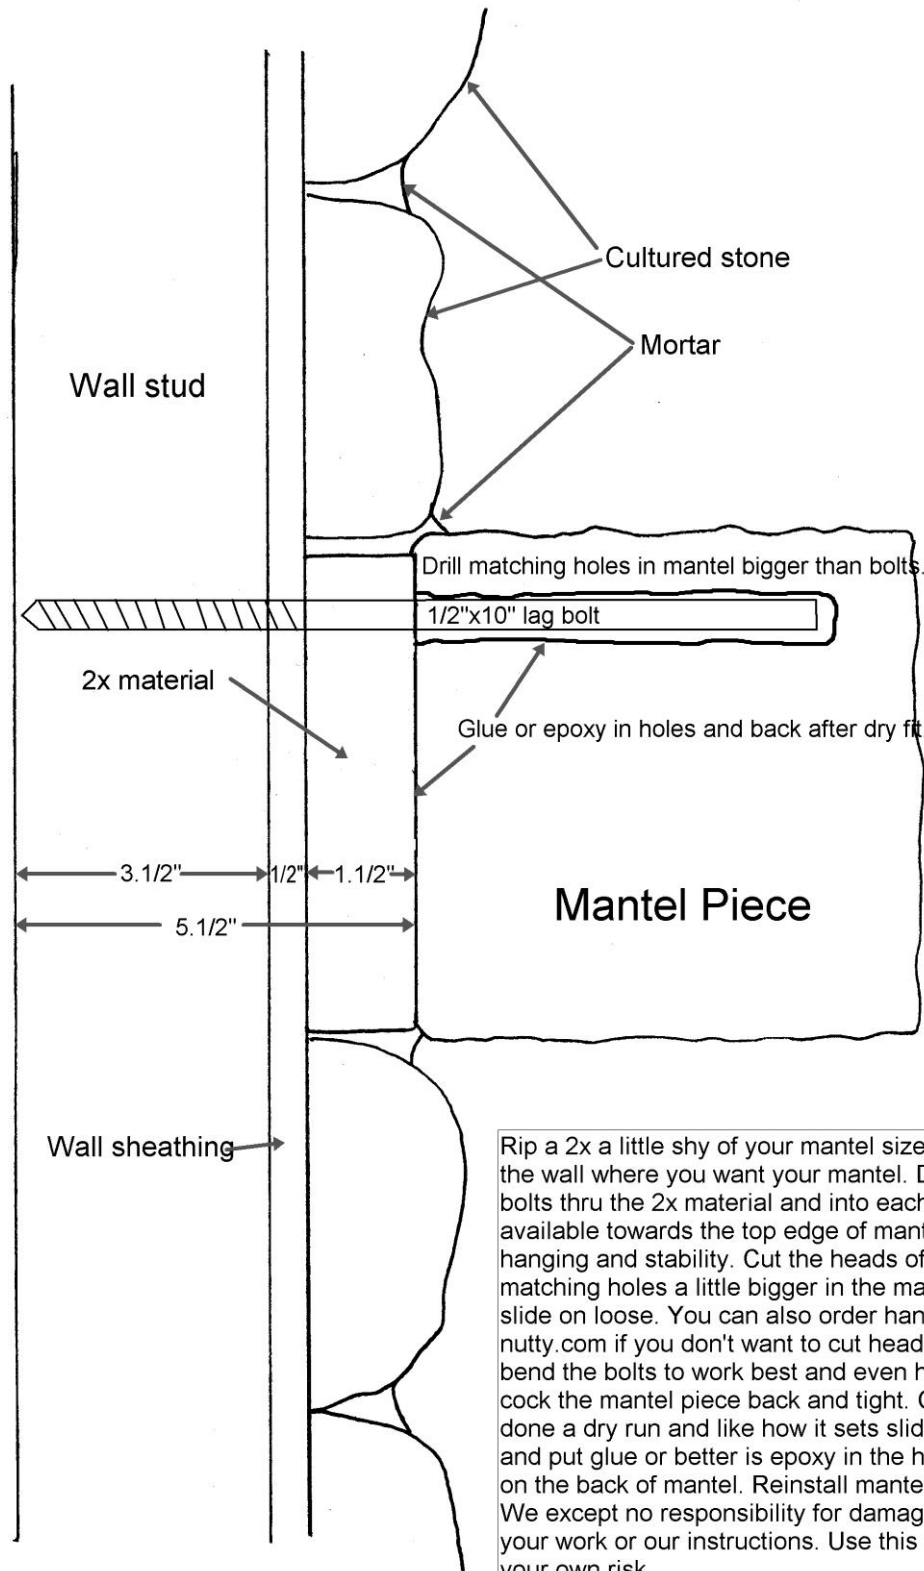

Rip a 2x a little shy of your mantel size. Mount well to the wall where you want your mantel. Drill large lag bolts thru the 2x material and into each house stud available towards the top edge of mantel for better hanging and stability. Cut the heads off and drill matching holes a little bigger in the mantel for it to slide on loose. You can also order hanger bolts from nutty.com if you don't want to cut heads off. You can bend the bolts to work best and even help level or cock the mantel piece back and tight. Once you have done a dry run and like how it sets slide the mantel off and put glue or better is epoxy in the holes and a little on the back of mantel. Reinstall mantel and let dry. We except no responsibility for damages or injury of your work or our instructions. Use this information at your own risk..

© 1995 Christopher Construction Company/Barnwood